


1. DIP Setting.

Before replacing the damaged Digit, locate the DIP-Switch on the Digit, and write the setting down on the DIP-Setting scheme.

- It is important that the new Digit has the same DIP-Setting as the one it is replacing.

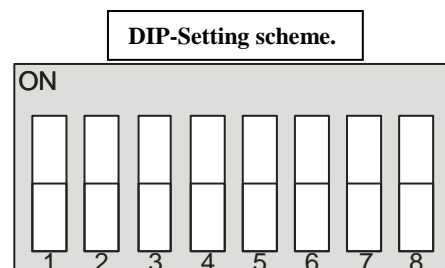

2. How to replace digits.

1. Turn off the power for the Scoreboard.

2. Dismount the screws in one of the sides of the Scoreboard, and remove the metal bracket.

3. Remove the Acryl covering the Digit that must be replaced.



4. Dismount the Ribbon Cable mounted on the old Digit.

5. Unscrew the screws holding the Digit in place.

6. Dismount the old Digit.

7. Mount the new Digit with the enclosed screws.

8. Reconnect the Ribbon Cable.

9. Set the DIP-Switch on the new Digit, according to the DIP-Setting scheme that was filled in the top.

10. Turn on the power for the Scoreboard, and check that new Digit is working.

11. Reassemble the Scoreboard.

